

Flexi-Tile Cleaning & Maintenance

Flexi-Tiles are long lasting & extremely durable however they do need to be maintained to keep them looking like new, the secret is to follow our cleaning guide below:

1. After Installation

Cleaning after the installation of Flexi-Tile is very important as installation can often leave residues of dust and dirt, the floor needs to be brushed or vacuumed followed by a thorough clean using *Professional Flexi-Tile Floor Cleaner*. To do so use a dilution of 125ml to 5ltrs of hot water and apply with sponge, cloth or mop. *Professional Flexi-Tile Floor Cleaner* can also be used in a scrubbing machine. Avoid ponding and standing water.

2. Continual cleaning & maintenance

Always ensure that dust is removed with a damp mop or brush before wet mopping.

To remove dirt, dilute 60ml of *Professional Flexi-Tile Floor Cleaner* to 5ltr of warm/hot water and use mop or cleaning machine.

We recommend cleaning daily depending on the amount of traffic on the floor. Regular & light cleaning is better than infrequent & heavy cleaning.

Flexi-Tiles are resistant to most chemicals, however excessive spillages should be removed without delay.

Never use abrasive cleaners, soaps paste waxes or solvents on your Flexi-Tile floor

NB

In case of loose laying – moisture may get into the joints of the tiles, therefore when cleaning regularly it is important to do so with a limited amount of water, ponding should be avoided.

These cleaning & maintenance instructions were issued by the manufacturer. By passing these instructions on to our clients we are complying to DIN standard 18 365 when newly laying a floor. If you have any further questions regarding cleaning and maintenance of Flexi-Tile please don't hesitate to contact us.

+44 (0) 28 9262 5898

+44 (0) 28 9264 0830

Email: info@unicorn-mouldings.com

www.unicorn-mouldings.com

One of the Unicorn Companies

VAT No: GB 976 049 385 Co. Reg. No: NI 027727

Tel:

Fax:

Web: